

ENDAT-D2512 USERS MANUAL
UNICORN COMPUTER CORP.

ENDAT-D2512

User's Manual

For ENDAT-D2512 PCB ver. A2 or later

Document version: 1.1

Release Date: Nov.27.2014

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Copyright Notice

The content of this manual has been checked for accuracy. The manufacturer assumes no responsibility for any inaccuracies that may be contained in this manual. **The manufacturer reserves the right to make improvements or modification to this document and/or the product at any time without prior notice.** No part of this document may be reproduced, transmitted, photocopied or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical or chemical, without the prior written permission of the manufacturer.

Realtek is registered trademark of Realtek Technologies Inc.

Multiscan is a trademark of Sony Corp of America

IBM, EGA, VGA, PC/XT, PC/AT, OS/2 and PS/2 are registered trademarks of International Business Machines Corporation

Intel® is a registered trademark of Intel Corporation

VIA is registered trademark of VIA Technology Incorporation

Plug and Play is registered trademarks of Intel Corporation

Microsoft, Windows and MS-DOS are trademarks of Microsoft Corporation

Award is a trademark of Phoenix Software Inc.

PCI is a registered trademark of PCI Special Interest Group

Other product names mentioned herein are used for identification purpose only and may be trademarks and/or registered trademarks of their respective companies.

Installation Notice

The manufacturer recommends using a grounded plug to ensure proper motherboard operation. Care should be used in proper conjunction with a grounded power receptacle to avoid possible electrical shock. All integrated circuits on this motherboard are sensitive to static electricity. To avoid damaging components from electrostatic discharge, please do not remove the board from the anti-static packing before discharging any static electricity to your body, by wearing a wrist-grounding strap. The manufacturer is not responsible for any damage to the motherboard due to improper operation.

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Specification:

Model	ENDAT-D2512
System Chipset	Intel® NM10
CPU Supporting	Intel Cedarview N2800 (Dual Core, 1.86GHz, 6.5Watt) Intel Cedarview D2550 (Dual Core, 1.86GHz, 10 Watt)
Memory	1 x 204-Pin DDR3 SODIMM sockets support DDR3-800/1066 up to 4 GB
Ethernet	2 x Intel Gb LAN support by 82583V
VGA	Intel graphic GMA3600 , Maximum resolution up to 1920 x 1200
LVDS interface	Support 18/24/36/48bit LVDS with backlight control (maximum resolution 1920 x 1080)
Dual view	CRT + DVI, CRT + LVDS
Serial/Print	4 ports RS-232 with power selector (+12V / Ring-in / +5V)
RS 422 / 485	by COM2
SATA	2 x SATA2 connectors with AHCI support
USB	USB 2.0 x 8 (4 external + 4 internal/1 Share Mini-PCle slot)
Expansion	1 x PICMG 1.0 compliant PCI slot support up to 2 PCI expansions 1 x Mini-PCle x1 Socket, 1 x SIM card socket (optional)
Watch Dog Timer	On-chip supports 1 to 255 seconds / minutes
AUDIO	On-board supports HD Audio with 1.2W amplifier
Back Panel I/O	1 x PS/2 Keyboard & Mouse Double-decker connector
	3 x D-sub Connector for COM 1,2,3
	1 x VGA
	2 x RJ-45 Connector
	4 x USB(2.0) Connector
I/O Onboard	1 x SPK-out
	1 x PS2 Keyboard & Mouse with 2.54mm Pin Header
	VGA & LPT1 with 2.0mm Box Header
	COM4 with 2.54 mm Box Header
	4 x USB with 2.54mm Pin Header
	Speaker out, Line-in, CD-in, MIC-in, S/PDIF Pin Header
	8-bits digital I/O for CMOS/TTL level (4 bit input / 4 bit output) with 2.0mm Pin Header
	1 x SP/DIF + 1 x SM BUS with 2.0mm Pin Header
Power Supply	SIM Card Socket (optional)
	DC 12V
Form Factor	MINI-ITX (170mm x 170mm) with 6 Layers PCB

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Specification:

Model	ENDAT-D2512S	ENDAT-D2512S1
System Chipset	Intel® NM10	
CPU Supporting	Intel Cedarview N2800 (Dual Core, 1.86GHz, 6.5Watt) Intel Cedarview D2550 (Dual Core, 1.86GHz, 10 Watt)	
Memory	1 x 204-Pin DDR3 SODIMM sockets support DDR3-800/1066 up to 4 GB	
Ethernet	2 x Intel Gb LAN support by 82583V	1 x Intel Gb LAN support by 82583V
VGA	Intel graphic GMA3600 , Maximum resolution up to 1920 x 1200	
LVDS interface	Support 18/24/36/48bit LVDS with backlight control by standard (maximum resolution 1920 x 1080)	
Dual view	CRT + DVI, CRT + LVDS	
Serial/Print	4 ports RS-232 with power selector (+12V / Ring-in / +5V)	
RS 422 / 485	by COM2	
SATA	2 x SATA2 connectors with AHCI support	
USB	USB 2.0 x 4 (4 internal/1 Share Mini-PCle slot)	USB 2.0 x 6 (2 external + 4 internal/1 Share Mini-PCle slot)
Expansion	1 x PICMG 1.0 compliant PCI slot support up to 2 PCI expansions 1 x Mini-PCle x1 Socket, 1 x SIM card socket (optional)	
Watch Dog Timer	On-chip supports 1 to 255 seconds / minutes	
AUDIO	On-board supports HD Audio with 1.2W amplifier	
Back Panel I/O	1 x PS/2 Keyboard & Mouse connector	1 x PS/2 Keyboard & Mouse connector
	1 x D-sub Connector for COM 2	1 x D-sub Connector for COM 2
	1 x VGA	
	2 x RJ-45 Connector	1 x RJ-45 Connector
	N/A	1 x USB 2.0 Connector
	1 x SPK-out	
I/O Onboard	1 x PS/2 Keyboard & Mouse with 2.54mm Pin Header	
	VGA & LPT with 2.0mm Box Header	
	COM1, COM3, COM4 with 2.54 mm Box Header	
	4 x USB with 2.54mm Pin Header	
	Speaker out, Line-in, CD-in, MIC-in, S/PDIF Pin Header	
	8-bits digital I/O for CMOS/TTL level (4 bit input / 4 bit output) with 2.0mm Pin Header	
	1 x S/PDIF + 1 x SM BUS with 2.0mm Pin Header	
	SIM Card Socket (optional)	
Power Supply	DC 12V	
Form Factor	MINI-ITX (170mm x 170mm) with 6 Layers PCB	

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

TABLE OF CONTENTS

CHAPTER 1. INTRODUCTION	6
1-1. FEATURES	7
1-2. UNPACKING	8
1-3. ELECTROSTATIC DISCHARGE PRECAUTIONS	8
1-4. MOTHERBOARD LAYOUT	9
CHAPTER 2. SETTING UP THE MOTHERBOARD.....	12
2-1. JUMPERS AND CONNECTORS.....	12
2-2. INSTALLING MEMORY	20
2-3. SHARED VGA MEMORY	20
2-4. WATCH DOG TIMER	20
2-5. Digital I/O.....	22
CHAPTER 3. AWARD BIOS SETUP	24
CHAPTER 4. VGA, SDVO AND DRIVERS.....	28
4-1. VGA FEATURE.....	28
4-2. DRIVER UTILITY INSTALLATION GUIDE.....	29
APPENDIX A: FLASH MEMORY UTILITY	30
APPENDIX B: LVDS PIN ASSIGNMENT	31
APPENDIX C: LIMITED WARRANTY	32

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Chapter 1. Introduction

In order to cope with the challenges of the system performance issues and demand of much more visually embedded system in diverse application, ENDAT-D2512 system board provides the ultimate solution with Intel® Cedarview N2800 / D2550 Processors. This package offers a high performance Intel® CPU with optimal power efficiency on the embedded market.

ENDAT-D2512 supports single channel DDR3 800/1066 MHz memory. The maximal capacity is up to 4GB.

ENDAT-D2512 integrated Mobile Intel® Graphics GMA3600 which supports Microsoft DirectX 10 and MPEG-2 decoder for higher visual application.

ENDAT-D2512 supports various kinds of display include VGA, DVI and LVDS; Dual display is also feasible.

ENDAT-D2512 provides one PCI slot and one Mini-PCle slot to support one standard PCI and Mini-PCle interface.

The ideal solutions of ENDAT-D2512

- POS system
- KIOSK
- Vehicle system
- Interactive system
- Industrial controller
- Gaming system
- Medical system
- Embedded system equipment

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

1-1. Features

Basic Feature:

- Intel® Cedarview N2800 / D2550.
- Single channel DDR3 SO-DIMM socket supports 800/1066 MHz up to 4 GB.
- Dual PCI Express interface Gigabit Ethernet chip on-board.
- Intel® Graphics GMA3600.
- PCI + Mini-PCIe slot support.
- USB 2.0 x 8 (4 external + 4 internal/1 Share Mini PCI-E Slot, USB port7 share Mini PCI-E slot).
- Built-in HD Audio with 1.2W amplifier.
- Four fully functional serial ports.
- +12V Only DC input power

Software Support

- Drivers for major embedded operating systems: Linux, Windows7.

Ordering information:

Standard edition:

ENDAT-D2512-N : Cedarview N2800

ENDAT-D2512-D : Cedarview D2550

Slim height edition:

ENDAT-D2512S-N : Cedarview N2800

ENDAT-D2512S-D : Cedarview D2550

ENDAT-D2512S1-N : Cedarview N2800

ENDAT-D2512S1-D : Cedarview D2550

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

1-2. Unpacking

The motherboard comes securely packaged in a sturdy cardboard shipping carton. In addition to the User's Manual, the motherboard package includes the following items:

- ENDAT-D2512 System Board
- One SATA HDD Cable
- Serial (2.54mm) port and Parallel port (2.0mm) Cable.
- LCD cable and DVI Cable (Optional).
- CD with Driver utilities for on-board chipsets, VGA and LAN adapter

If any of these items is missing or damaged, please contact the dealer whom you purchased the motherboard from. Save the shipping material and carton in the event that you want to ship or store the board in the future.

Note: Leave the motherboard in its original package until you are ready to install it!

1-3. Electrostatic Discharge Precautions


Make sure you properly ground yourself before handling the motherboard, or other system components. Electrostatic discharge can easily damage the components. Note: You must take special precaution when handling the motherboard in dry or air-conditioned environments.

UNICORN



ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

1-4. MOTHERBOARD LAYOUT.

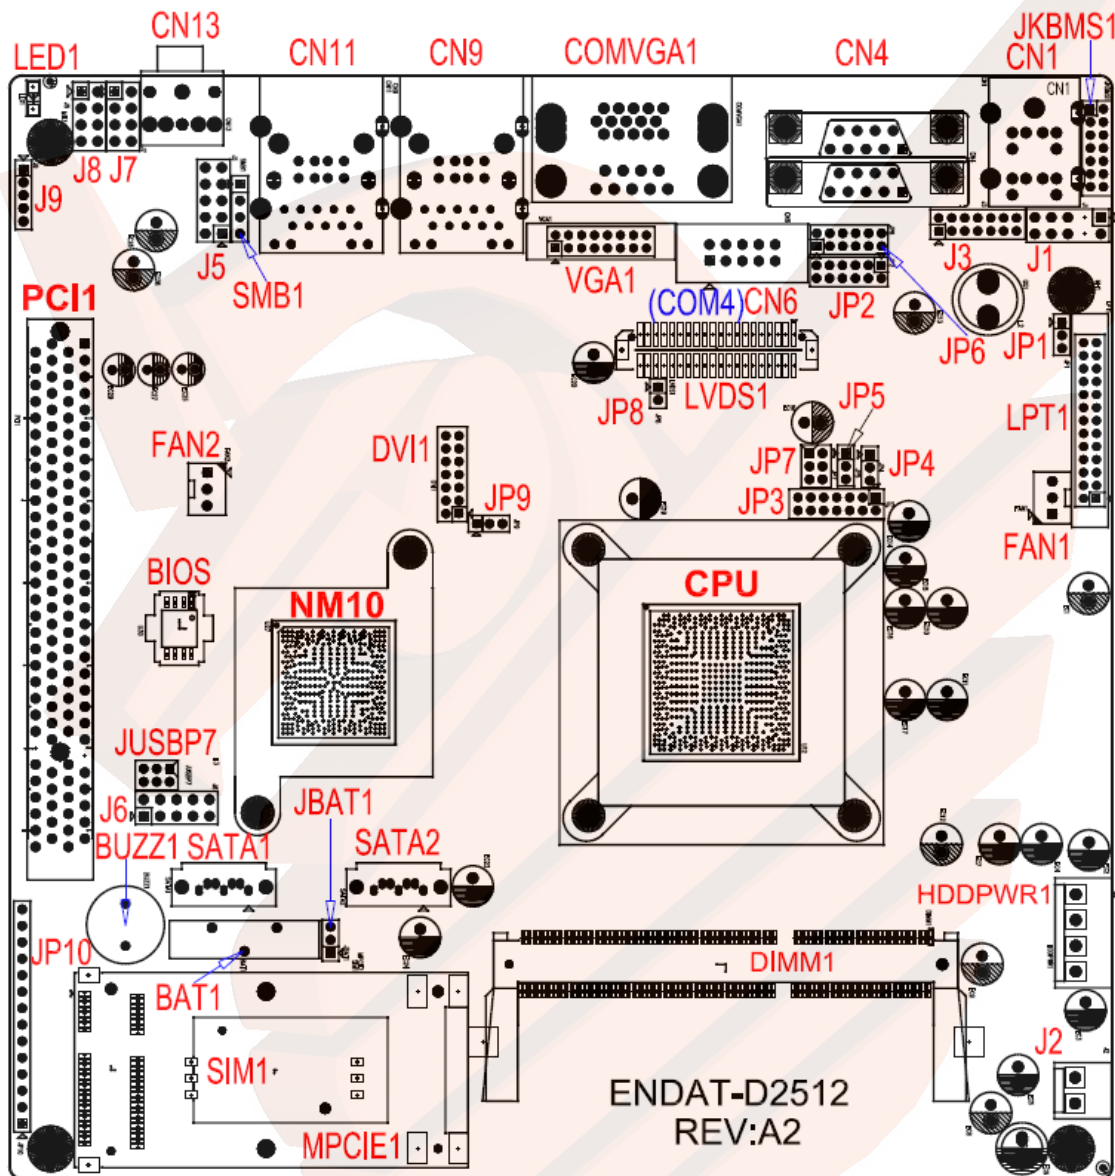


JP10

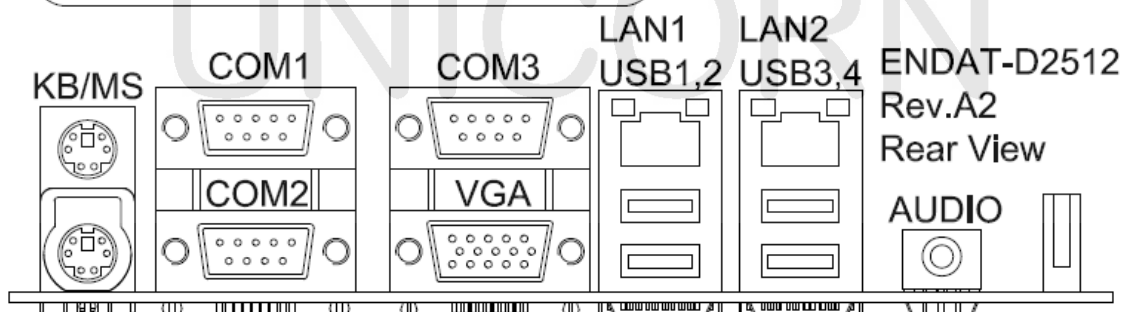


ENDAT-D2512 USERS MANUAL


UNICORN COMPUTER CORP.

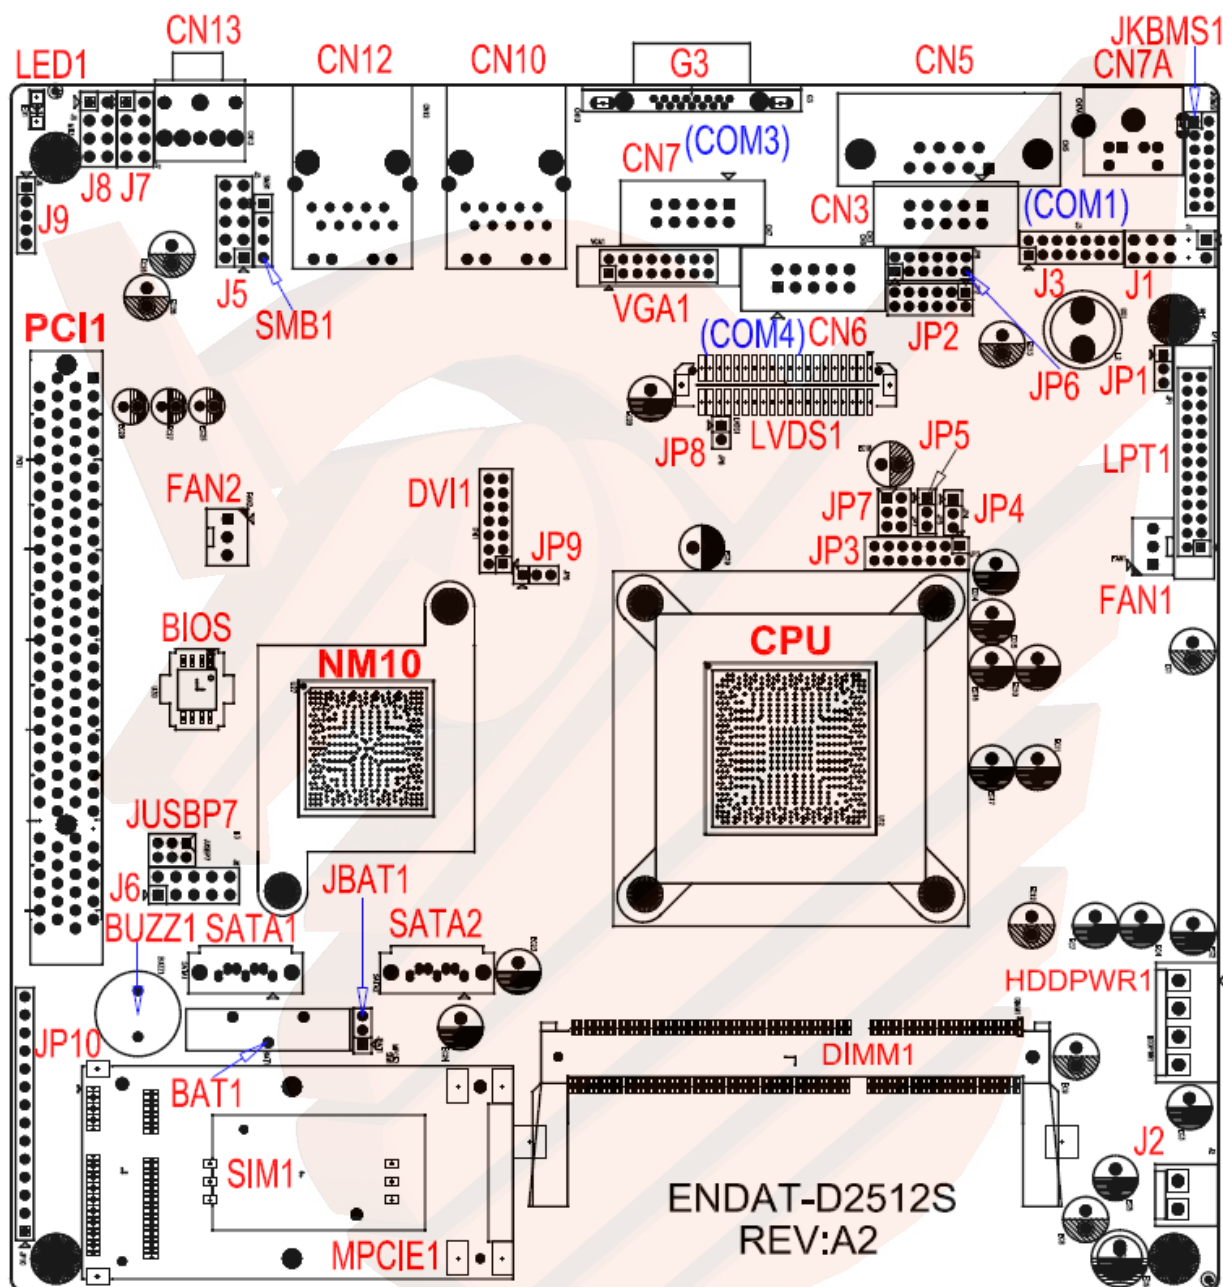



JP10




ENDAT-D2512S
Rev.A2
Rear View

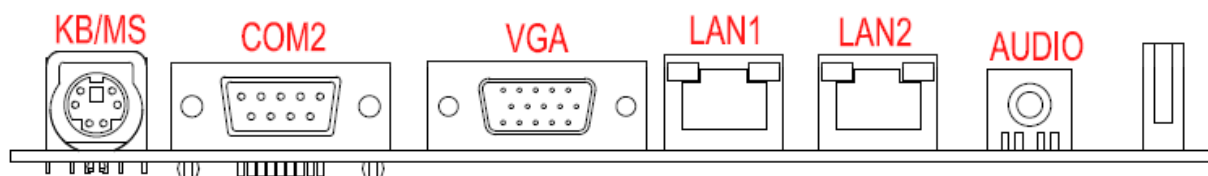

UNICORN COMPUTER CORP.

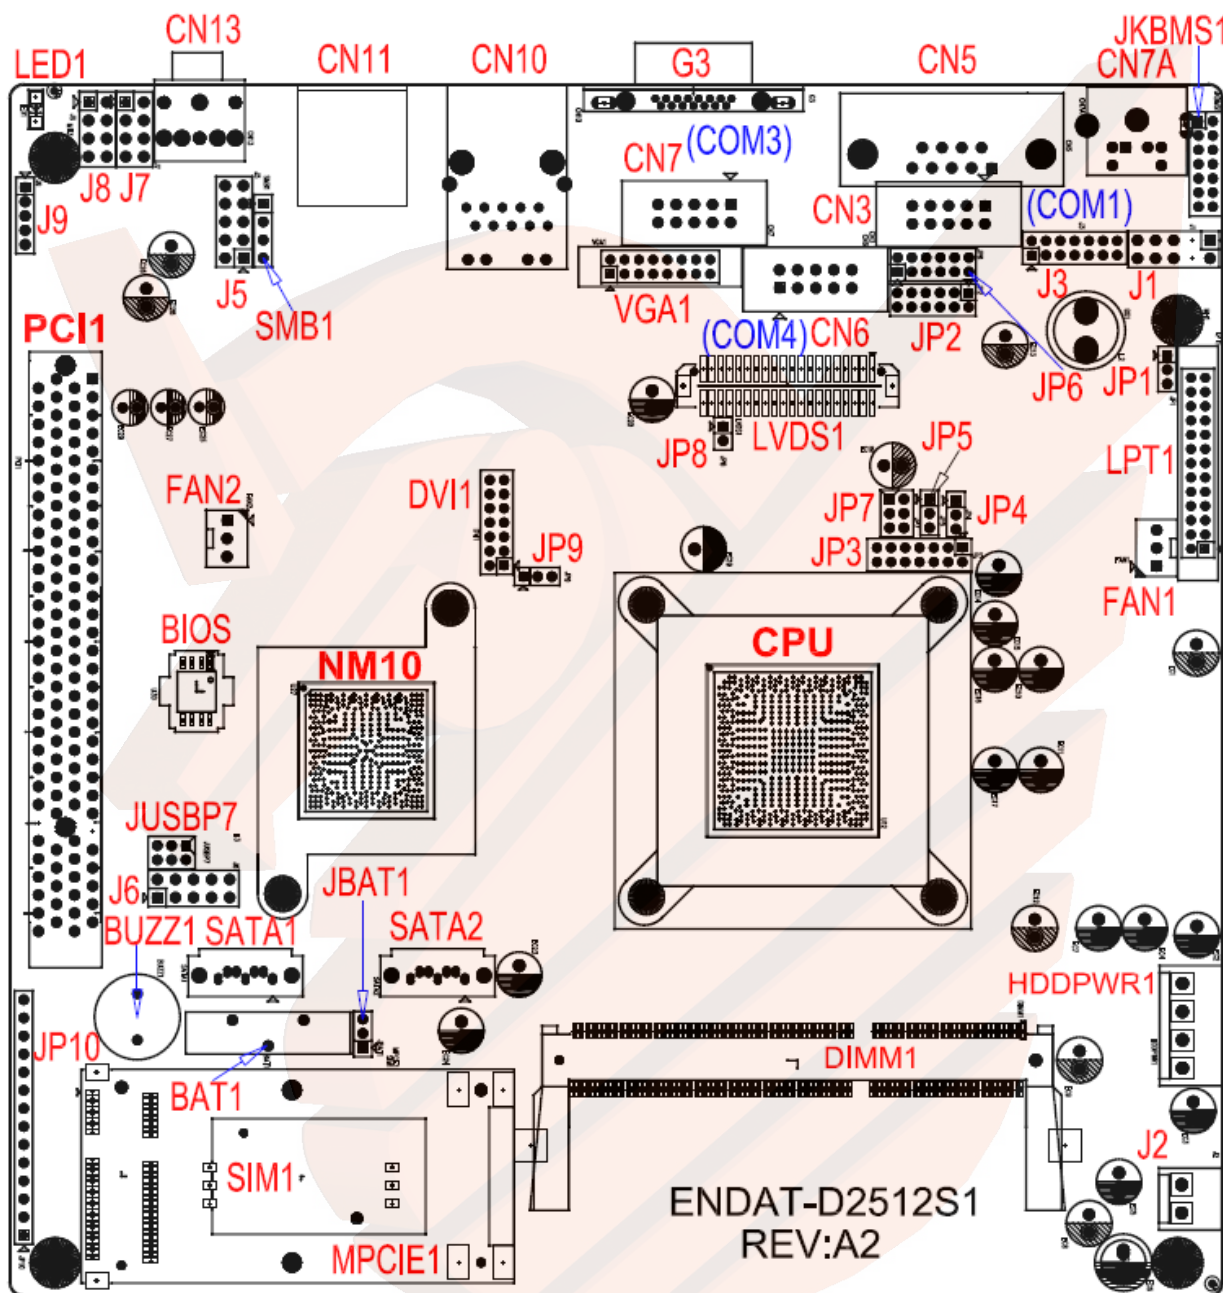

ENDAT-D2512S1
Rev.A2
Rear View

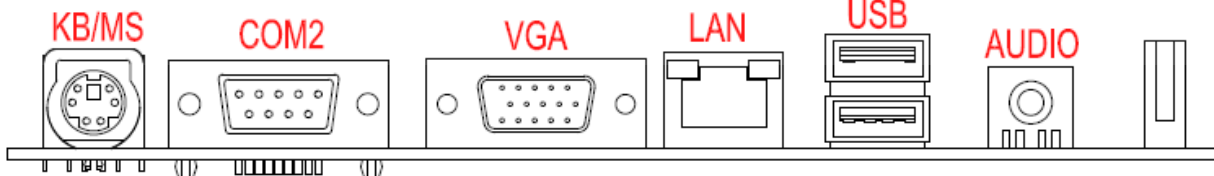

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Chapter 2. Setting up the Motherboard

2-1. Connectors / Headers and Jumpers

Connectors Overview:

Function	Connectors		
	D2512	D2512S	D2512S1
PS/2 MS/KB Connectors	CN1		
Cooling Fan Connector	FAN1, FAN2		
DC Power Supply Connector	J2		
HDD Power Connector	HDDPWR1		
USB 0,1 Port Connector	CN9	N/A	CN11
USB 2,3 Port Connector	CN11	N/A	N/A
USB 4,5 Port Header	J5		
USB 6,7 Port Header	J6		
LAN 1 Port Connector	CN9	CN10	CN10
LAN 2 Port Connector	CN11	CN12	N/A
SATA Connector	SATA1, SATA2		
DDR3 RAM Socket	DIMM1		
CRT Output Connector	COMVGA1	G3	G3
VGA Box Header	VGA1		
DVI Header	DVI1		
EDID Panel	JP3		
24/48 bit LCD Panel Connector	LVDS1		
COM1 Connector / Box Header	CN4	CN3	
COM2 Connector / Box Header	CN4	CN5	
COM3 Connector / Box Header	COMVGA1	CN7	
COM4 Box Header	CN6		
Printer Port Box Header	LPT1		
HD Audio Speaker Output	CN13		
PCI Slot	PCI1		
Mini-PCIe Socket	MPCIE1		
SIM Card Socket	SIM1		
Battery Socket	BAT1		
PS/2 Mouse/KB Pin Header	J1		
External PS/2 Device Header	JKBMS1		

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Function	Connectors		
	D2512	D2512S	D2512S1
SM BUS Pin Header		SMB1	
Line-Out, CD-In Pin Header		J7	
Line-In 、MIC-In Pin Header		J8	
S/PDIF Pin Header		J9	
DIGITAL I/O Pin Header		J3	

Jumpers Overview:

Function		Connectors
LVDS1	LCD Voltage Select	JP7
	LCD Backlight Voltage Select	JP4
	LCD Backlight Control Voltage Select	JP5
	LCD Backlight Voltage (for +5V)	JP8
Clear CMOS		JBAT1
PS2 Power Selector		JP1
COM1/2/3/4 Voltage Selector		JP6,JP2
USB Port7 share to Mini PCIe slot		JUSBP7
Header for Case Panel		JP10
HDD LED		JP10: Pin 1(-), Pin 2(+)
External Speaker		JP10: Pin 3(-), Pin 6(+)
Buzzer On/Off		JP10: Pin 4, Pin 5
Hardware Reset Switch		JP10: Pin 7, Pin 8
ATX Power Supply On/Off Switch		JP10: Pin 9, Pin 10
Power LED		JP10: Pin 11(-), Pin 12(+)
WDT Function Enable/Disable		JP10: Pin 13, Pin 14

Part 1: Onboard Jumpers

JP1: PS/2 Standby Power Selector (1x3 with 2.0mm)

Pin 1-2 *	+5Vsb
Pin 2-3	+5V

JBAT1: CMOS Data Clear (1x3 with 2.0mm)

Pin 2-3 *	Normal
Pin 1-2	Close for clear CMOS

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

JP6, JP2: COM Port Voltage Selector (2x6 with 2.0mm)

Voltage	+12V(DC)	R.I. *	+5V(DC)
JP6 (COM1)	1-2	3-4	5-6
JP6 (COM2)	7-8	9-10	11-12
JP2 (COM3)	1-2	3-4	5-6
JP2 (COM4)	7-8	9-10	11-12

JP7: LCD Voltage Select (2x3 with 2.0mm)

Voltage	+3.3V *	+5V	+12V
JP7 (LVDS1)	1-2	3-4	5-6

JP4: LCD Backlight Voltage Select (1x3 with 2.0mm)

Voltage	+5V	+12V *
JP4 (LVDS1)	1-2	2-3

JP5: LCD Backlight Control Voltage Select (1x3 with 2.0mm)

Voltage	+3.3V *	+5V
JP5 (LVDS1)	1-2	2-3

JP8: LCD Backlight Voltage (for +5V) (1x2 with 2.0mm)

	Voltage
JP8 (LVDS1)	+5V

JUSBP7: USB Port Select (2x3 with 2.0mm)


	J6 USB 7 Header	Mini PCIE slot*
JUSB7	1-3,2-4	3-5,4-6

Notice: The JUSBP7 jumper setting for USB Port7 share to mini PCIe slot.

Part 2: Onboard Connectors and Headers

VGA1: CRT Box Header Connector (2x8 with 2.0mm)

Pin No.	Description	Pin No.	Description
1	RED	9	N.C.
2	GREEN	10	GND
3	BLUE	11	N.C.
4	N.C.	12	DDC DAT
5	GND	13	H-Sync
6	GND	14	V-Sync
7	GND	15	DDC CLK
8	GND		

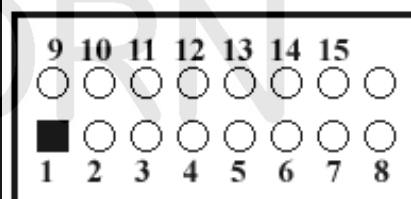

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

DVI1: DVI Header Connector (2x7 with 2.0mm)

Pin No.	Description	Pin No.	Description
1	DVI_TDC2-CN	2	+5V
3	DVI_TDC2+CN	4	GND
5	DVIOUTDATA	6	DVIHPDET
7	DVIOUTCCLK	8	DVI_TDC0-CN
9	DVI_TDC1-CN	10	DVI_TDC0+CN
11	DVI_TDC1+CN	12	GND
13	DVI_TLC-CN	14	DVI_TLC+CN

Notice: DVI cable is optional.

Serial port D-SUB Type Connector for (RS-232)

Pin No.	Function	Pin No.	Function
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		



D-SUB Type Connector for COM2 port (RS-485→ 2 Wire)

Pin No.	Function	Pin No.	Function
1	Data –	6	NA
2	Data +	7	NA
3	NA	8	NA
4	NA	9	NA
5	NA		

D-SUB Type Connector for COM2 port (RS-422→ 4 Wire)


Pin No.	Function	Pin No.	Function
1	–TXD	6	NA
2	+RXD	7	NA
3	+TXD	8	NA
4	–RXD	9	NA
5	NA		

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Serial port Box Headers (2x5 with 2.54mm)

Pin No.	Function	Pin No.	Function
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND	10	N.C.

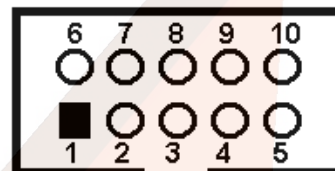

LPT1: Printer Port Box Header (2x13 with 2.0mm)

Pin No.	Description	Pin No.	Description
1	STB#	10	ACK#
2	PD0	11	BUSY
3	PD1	12	PE
4	PD2	13	SLCT
5	PD3	14	AFD#
6	PD4	15	ERR#
7	PD5	16	INIT#
8	PD6	17	SLIN#
9	PD7	18-25	GND



J1: PS/2 Keyboard / Mouse Header (2x5 with 2.54mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	KB Data	2	MS Data
3	KEY	4	KEY
5	GND	6	GND
7	+5V(DC)	8	+5V(DC)
9	KB_CLK	10	MS_CLK

JKBMS1: External PS/2 Device Header (2x7 with 2.0mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	MS Data Out	2	KB Data Out
3	MS Data In	4	KB Data In
5	MS CLK Out	6	KB CLK Out
7	MS CLK In	8	KB CLK In
9	KEY	10	KEY
11	+5V(DC)	12	+5V(DC)
13	GND	14	GND

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

J5 (USB 4&5), J6 (USB 6&7): Pin Header for USB ports (2x5 with 2.54mm)

Pin No.	Function	Pin No.	Function
1	USB_VCC	2	USB_VCC
3	USBD-	4	USBD-
5	USBD+	6	USBD+
7	USB_GND	8	USB_GND
9	KEY	10	USB_GND

Notice: The JUSBP7 jumper setting for USB Port7 share to mini PCIe slot.

J3: Digital I/O Header (2x7 with 2.0mm)

Pin No.	Function	Pin No.	Function
1	+5V	2	+5V
3	DIO-OUT0	4	DIO-IN0
5	DIO-OUT1	6	DIO-IN1
7	DIO GND	8	DIO GND
9	DIO-OUT2	10	DIO-IN2
11	DIO-OUT3	12	DIO-IN3
13	+3.3V	14	+3.3V

J7: LINE-OUT & CD-IN Header (2 x 4 with 2.54mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	LINE_OUT_L	2	CD_IN_R
3	JACK_DETECT	4	GND_AUD
5	GND_AUD	6	GND_AUD
7	LINE_OUT_R	8	CD_IN_L

Notice: Please connect the jack detect pin to "GND_AUD" if the actual connector cannot support the jack detect function!

J8: LINE-IN & MIC-IN Header (2 x 4 with 2.54mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	LINE_IN_R	2	MIC_R
3	JACK_DETECT	4	JACK_DETECT
5	GND_AUD	6	GND_AUD
7	LINE_IN_L	8	MIC_L

Notice: Please connect the jack detect pin to "GND_AUD" if the actual connector cannot support the jack detect function!

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

J9: S/PDIF Header (1 x 5 with 2.0mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	+5V	4	GND
2	N.C	5	S/PDIF-IN
3	S/PDIF-OUT		


SMB1: SM BUS Header (1 x 5 with 2.54mm)

Pin No.	Signal (KB)	Pin No.	Signal (MS)
1	SMB_CLK	4	SMB_DATA
2	+3.3V	5	GND
3	IR_RX		


FAN1, FAN2: Cooling Fan Connector

Pin No.	Function
1	GND
2	+12V
3	Sensor Pin

DC-IN1: DC Input connector (1x2 with 3.96mm)

Pin No.	Signal	
1	GND	
2	+12V	

HDDPWR1: DC Output connector (1x4 with 3.96mm)

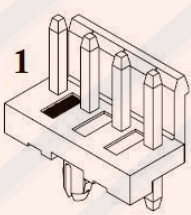
Pin No.	Signal	
1	+12V	
2	GND	
3	GND	
4	+5V	

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

LVDS: Single /Dual Channel LVDS (18/24/36/48 bit only, 1.25mm)
MB: DF-13A-40DP-1.25V / Map: DF13-40DS-1.25C

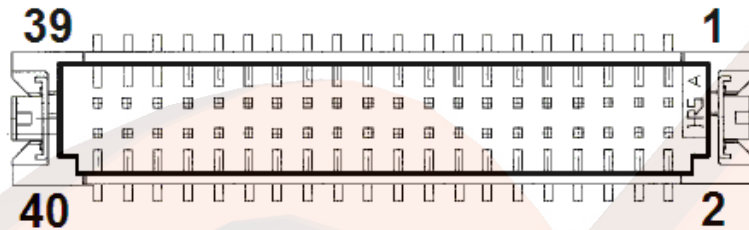

Pin No.	Signal	Pin No.	Signal
1	VBL	2	VBL
3	GND	4	GND
5	DISP.ON/OFF	6	GND
7	LCD POWER	8	LCD POWER
9	GND	10	GND
11	Odd 0+	12	Odd 0-
13	Odd 1+	14	Odd 1-
15	Odd 2+	16	Odd 2-
17	Odd 3+	18	Odd 3-
19	Odd CLK+	20	Odd CLK -
21	GND	22	KEY
23	Even 0+	24	Even 0-
25	Even 1+	26	Even 1-
27	Even 2+	28	Even 2-
29	Even 3+	30	Even 3-
31	Even CLK+	32	Even CLK-
33	LCD POWER	34	LCD POWER
35	GND	36	GND
37	GND	38	GND
39	VBL	40	VBL

Please make sure the Pin 1 location before plug-in LCD connector.

Please leave pin 23rd ~ pin 32nd unconnected if the single channel LVDS function is needed.

Please double check "jumper setting & LCD cable's orientation" before power-on, any incorrect installation may caused damaged of the LCD.

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

2-2. Installing Memory

The DDR3 SO-DIMM sockets of ENDAT-D2512 support up to 4GB memory. The speed of DDR3 memory can be DDR3-800 or DDR3-1066.

2-3. Shared VGA Memory

The ENDAT-D2512 built-in Intel® GMA3600 graphic engine with DVMT 4.0 up to 384MB system memory. The amount of video memory on motherboard determines the number of colors and the video graphic resolution.

2-4. Watch Dog Timer

Watch dog Timer (WDT) is a special design for system monitoring to secure the system work normally. WDT has an independent clock from the oscillator and could set time and clear/refresh WDT counter function. When time is up, WDT will send hardware RESET signal to reset system.

Timeout Value Range

-1 to 255

-Second or Minute

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Sample code (using TurboC/C++ 3.0):

```
#include <stdio.h>
#include <dos.h>
#include <dir.h>
void show_ver();
void main()
{
    unsigned int tt;
    clrscr();
    show_ver();
    tt=0;
    while((tt==0)|| (tt>255))
    {
        printf("\n\nPlease key in how many seconds you want to reset system (1~255):");
        scanf("%d",&tt);
    }
    outportb(0x2e,0x87);    //Unlock register
    outportb(0x2e,0x87);    //Unlock register
    outportb(0x2e,0x07);    //set Logic Device number pointer
    outportb(0x2f,0x08);    //set Logic Device number
    outportb(0x2e,0x30);    //set WDTO active
    outportb(0x2f,0x01);    //set reg value active (bit0 =1 active,0 inactive )
    outportb(0x2e,0xf5);    //set WDTO Control Mode
    outportb(0x2f,0x04);    //set register value (bit3=1: minute. =0: second)
    outportb(0x2e,0xf6);    //set WDT Counter
    outportb(0x2f,tt);      //set time out value of WDT
}

void show_ver()
{
    unsigned char tmp0;
    printf("Designed by attila of UNICORN computer corp. \n2012/08/29  release
version:1.0a\n");
    printf("This program is design for test Watch Dog Timer for ENADT-D2512
(W83627UHG).\n");
}
```

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

2-5. Digital I/O

Pin define:

J3: Digital I/O Header (2x7 with 2.0mm)

Pin No.	Function	Pin No.	Function
1	+5V	2	+5V
3	DIO-OUT0	4	DIO-IN0
5	DIO-OUT1	6	DIO-IN1
7	DIO GND	8	DIO GND
9	DIO-OUT2	10	DIO-IN2
11	DIO-OUT3	12	DIO-IN3
13	+3.3V	14	+3.3V

Digital I/O port address:

This function is support by onboard super I/O chip; it can be control easily by change the register of super I/O chip via I/O port "2Eh" and "2Fh". Please see the sample code of below for implement. Voltage tolerance: +/- 5% with 0V to +5V.

Sample code for input (using Turbo C/C++ 3.0):

bit No	7	6	5	4	3	2	1	0
Map	DIO-I3	DIO-I2	DIO-I1	DIO-I0	NA	NA	NA	NA

Sample code for input (using Turbo C/C++ 3.0)

```
#define input_port 0x2f // Digital input data port
Unsigned char read_data;
outportb(0x2e,0x87); //Unlock register
outportb(0x2e,0x87); //Unlock register
outportb(0x2e,0x07); //set Logic Device number pointer
outportb(0x2f,0x08); //set Logic Device number
outportb(0x2e,0x30); //set Device Active
outportb(0x2f,0x02); // set Bit 1 =GPIO5 ; 0=Inactive / 1= Active Default: 03h
outportb(0x2e,0xE0); // set GPIO Output / Input Port
outportb(0x2f,0xF0); // 0=Output/ 1=Input ; Default: F0h
// Bit 0~3 DIO-I0~ DIO3 / Bit4~7 DIO-I0~DIO-I3.

outportb(0x2e,0xF1); //Read DIO-Input register.
//Bit4~Bit7 = DIO-I0~DIO-I3.(Read Only)

read_data=inportb(input_port); // Read digital input data
printf("DIO-Input=%02X\n",read_data); //Show digital input data on screen
```

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Sample code for output (using Turbo C/C++ 3.0):

bit No	7	6	5	4	3	2	1	0
Map	NA	NA	NA	NA	DIO-O3	DIO-O2	DIO-O1	DIO-O0

Sample code for output (using Turbo C/C++ 3.0)

```

outportb(0x2e,0x87);    //Unlock register
outportb(0x2e,0x87);    //Unlock register
outportb(0x2e,0x07);    //set Logic Device number pointer
outportb(0x2f,0x08);    //set Logic Device number
outportb(0x2e,0x30);    //set Device Active
outportb(0x2f,0x03);    // set Bit 1 =GPIO5 ; 0=Inactive / 1= Active Default: 03h
outportb(0x2e,0xE0);    // set GPIO Output / Input Port
outportb(0x2f,0xF0);    // 0=Output/ 1=Input
                        // Bit 0~3 DIO-O0~ DIO3 / Bit4~7 DIO-I0~DIO-I3.

outportb(0x2e,0xE1);    //Read DIO-Input register.
outportb(0x2f,0xnm);    // n=DIO-I0~DIO-I3 / m=DIO-O0~DIO-O3.
                        Bit3~Bit4 = DIO-I0~DIO-I3.(Read Only)

```

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Chapter 3. AWARD BIOS SETUP

Phoenix – Award BIOS CMOS Setup Utility

> Standard CMOS Features > Advanced BIOS Features > Advanced Chipset Features > Integrated Peripherals > Power Management Setup > PnP/PCI Configurations	> PC Health Status - Load Optimized Defaults - Set Supervisor Password - Set Password - Save & Exit Setup - Exit Without Saving
--	--

Use the BIOS CMOS setup program to modify the system parameters to reflect the environment installed in your system and to customize the system as desired. Press the <DEL> key to enter into the BIOS CMOS setup program when you turn on the power. Settings can be accessed via arrow keys. Press <Enter> to choose an option to configure the system properly.

In the main menu, press F10 or "SAVE & EXIT SETUP" to save your changes and reboot the system. Choose "EXIT WITHOUT SAVING" to ignore the changes and exit the setup procedure. Pressing <ESC> at anywhere during the setup will return to the main menu.

All of the above CMOS BIOS items require board knowledge on PC/AT system architecture. Incorrect setup could cause system malfunctions.

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Following setting belongs to standard function setting:

Standard CMOS Features

The features setting Data/Time and SATA port 、 system memory Information.

- System Date (mm:dd:yy) .
- System Time (hh:mm:ss).
- Halt On (All Error, No Error, All, But Keyboard).
- System Memory Information

This submenu provides information about the system memory.

Advanced BIOS Features

The features setting system boot-up priority and keyboard operation 、 BIOS Security.

Hard Disk Boot Priority	Select Hard Disk Device Priority.
USB Boot Priority	Select USB Device Priority.
First Boot Device	Select Boot Device Priority.
Second Boot Device	
Third Boot Device	
Security Option	Select whether the password is required every time the system boots or only when you enter setup.

Advanced Chipset Features

The features setting displays devices 、 LCD panel Support and LAN Boot.

PCI Express Root Port Func	Boot On LAN1/2 Support.
Select Active LFP	LVDS Panel Support.
LVDS Resolution	Select LCD (eDP LVDS) resolution. 800x600x18bit, 1024x768x18bit, 1024x768x24bit, 1280x768x18bit, 1280x800x18bit, 1280x960x18bit 1280x1024x48bit, 1366x768x18bit 1366x768x24bit, 1440x900x48bit, 1400x1050x48bit, 1600x900x48bit 1680x1050x48bit, 1600x1200x48bit 1920x1080x48bit, 1920x1200x48bit.

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Integrated Peripherals

The features setting IO (serial and parallel port) resources, SATA type and AUDIO 、USB Controller set.

OnChip IDE Device	
>> SATA Mode	SATA Support IDE or AHCI
Onboard Device	
>> Intel HD Audio Controller	HD Audio Controller
SuperIO Device	
>> Onboard Serial Port 1 / 2	Serial Port 1 & 2
COM2 Support Mode	Support RS232 / 485 /422
COM2 Termination	Termination En/Disable
>> Onboard Parallel Port:	Parallel 1
Onboard Serial Port 3 / 4	Serial Port 3 & 4
Serial Port 3 / 4 Use IRQ:	Serial Port 3 & 4 IRQ
Watch Dog Timer Select	Enable WDT Function.
PWRON After PWR-Fail:	AC power loss status

Power Management Setup

The features setting System power management mode and Wake UP function.

ACPI Function	
ACPI Suspend Type	Support S1 , S3
USB KB Wake-Up From S3	USB Key board & Mouse Wake-Up.
Resume by Alarm	RTC Wake-Up.

PnP/PCI Configurations

The features setting init display First and System IRQ Resources.

Init Display First	Select First Boot Display for Onboard or PCI Device.
Resources Controlled By	Set System IRQ Resources for Auto or Manual
IRQ Resources	Set System IRQ Resources by Manual.

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

PC Health Status

The features Show System temperature 、 temperature protection 、 Fan speed 、 voltage.

Shutdown Temperature	When the CPU temperature exceeds the set, the system will automatically shut down.
CPU Warning Temperature	When the CPU temperature exceeds the set, the system will issue a warning sound.

Load Optimized Defaults

The features Load BIOS default setting.

Set Supervisor Password

The features Set BIOS setup administrator password.

Set User Password

The features Set BIOS setup user password.

Save & Exit Setup

The features save BIOS setting and exit BIOS setup

Exit Without Setup

The features not save BIOS setting and exit BIOS setup

UNICORN

Chapter 4. VGA, eDP and drivers

4-1. Graphic controller Feature

The ENDAT-D2512 integrated a high performance Intel® GMA3600 GFX engine with Intel® DVMT 4.0 technology. The Intel® GMA3600 offering the 3D enhancements enable greater flexibility and scalability. Improved GFX engine support Microsoft DirectX 10, OpenGL 1.5 on Windows, and OpenGL 2.0 on Linux.

The ENDAT-D2512 integrated graphics device (IGD) delivering cost competitive 3D, 2D and video capabilities. It contains an extensive set of instructions for 3D operations, 2D operations, motion compensation, overlay, and display control. The video engines support video conferencing and other video applications. The Intel® GMA3600 uses a UMA configuration with Intel® DVMT for graphics memory.

The ENDAT-D2512 also has the capability of supporting external graphics accelerators via the PCI slot but cannot work concurrently with the integrated graphics device. High bandwidth access to data is provided through the system memory port.

The build-in Graphics Controller's main features include:

- High Performance 3D and 2D graphics controller
- Support Microsoft DirectX 10
- Hardware frame buffer compression improves UMA (Unified Memory Architecture) memory efficiency
- VGA resolution up to 1920 x 1200
- LVDS (eDP port) resolution up to 1920x1080

UNICORN


ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

4-2. Driver Utility Installation Guide

1. When finishing the installation of Windows XP (**support 2D graphic only**), please install the relative Intel® chipsets, display and AUDIO driver manually for compliance compatibility of hardware environment.
2. Please contact sales department of UNICORN for Embedded OS user driver (Linux, Windows CE and Windows XP embedded). All of embedded OS driver is not be included in any versions of driver CD-ROM from UNICORN.

Please download or check from Intel® web site: www.intel.com for more information or last versions of driver as needs!

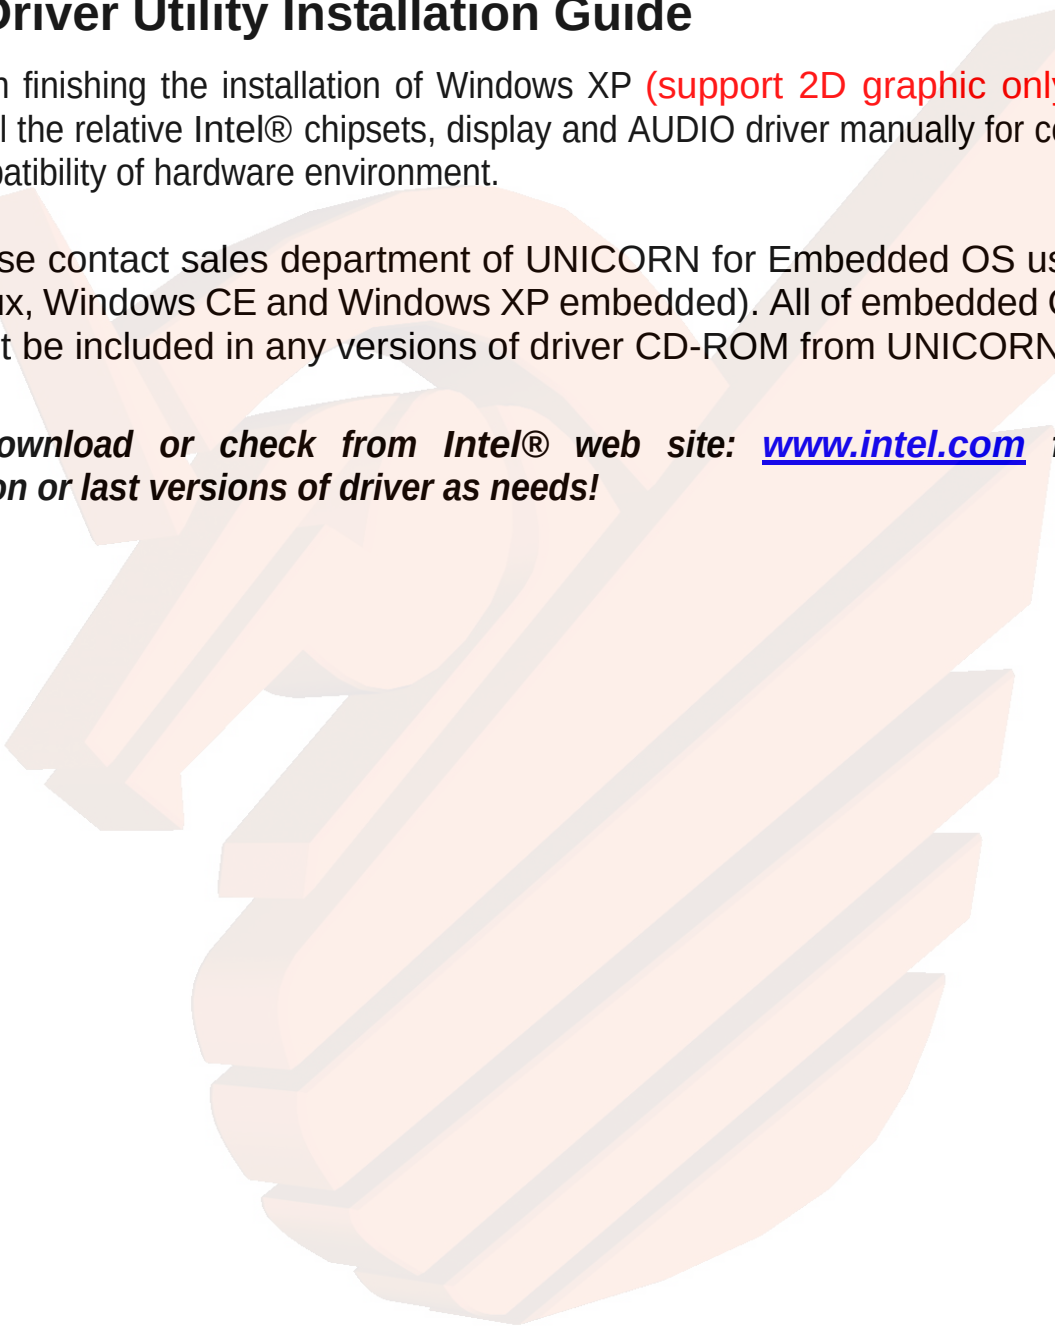

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Appendix A: FLASH MEMORY UTILITY

Using this package to update the system BIOS from a disk file to the on board Flash memory. Be aware any improper update of the system BIOS will cause the malfunction of the system.

Method of update BIOS:

1. Please contact one of the Sales Representative on behalf of Unicorn to acquire "BIOS update package", and process following procedures for the BIOS UPDATE.
2. Prepare a bootable storage that can boot under MS-DOS, (such as HDD, USB sticker...etc)
3. Unzip "BIOS Update package" into the bootable storage.
4. Run the Flash file.

AwardBIOS FLASH Utility V8.102	
C>Phoenix Technologies Ltd. All Rights Reserved	
Flash Type –	
File Name to Program:	
Message:	

5. Once the BIOS is Flash successfully, Reboot the system.
6. Press <Del> to enter BIOS Setup, save BIOS default and exit <F10>.

*** Please turn off system and clear CMOS data by JBAT1.**


*** Please restart your system and load setup default.**

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Appendix B: LVDS PIN ASSIGNMENT

LVDS: Single /Dual Channel LVDS (18/24/36/48 bit only, 1.25mm)
MB: DF-13A-40DP-1.25V / Map: DF13-40DS-1.25C

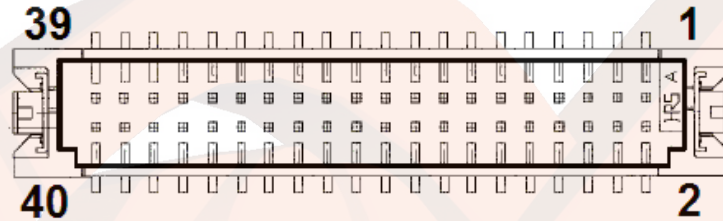

Pin No.	Signal	Pin No.	Signal
1	VBL	2	VBL
3	GND	4	GND
5	DISP.ON/OFF	6	GND
7	LCD POWER	8	LCD POWER
9	GND	10	GND
11	Odd 0+	12	Odd 0-
13	Odd 1+	14	Odd 1-
15	Odd 2+	16	Odd 2-
17	Odd 3+	18	Odd 3-
19	Odd CLK+	20	Odd CLK -
21	GND	22	KEY
23	Even 0+	24	Even 0-
25	Even 1+	26	Even 1-
27	Even 2+	28	Even 2-
29	Even 3+	30	Even 3-
31	Even CLK+	32	Even CLK-
33	LCD POWER	34	LCD POWER
35	GND	36	GND
37	GND	38	GND
39	VBL (+12V)	40	VBL (+12V)

Please make sure the Pin 1 location before plug-in LCD connector.
Please leave pin 23rd ~ pin 32nd unconnected if the single channel LVDS function is needed.

Please double check "jumper setting & LCD cable's orientation" before power-on, any incorrect installation may caused damaged of the LCD.


ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

Appendix C: LIMITED WARRANTY

Standard Two years limited warranty on all our ENDAT series all-in-one motherboards and embedded board. Products that become defective during the warranty period shall be repaired, or subject to manufacturer's option, replaced. The limited warranty applies to normal proper usage of the hardware and does not cover products that have been modified or subjected to unusual electrical or physical stress. Unicorn Computer Corp is not liable to repair or replace defective goods caused by improper using or use of unauthorized parts. The following situations will be charged:

1. The products during the warranty but defective caused by improper using or artificial external pressure and result in the components damages. According to the damage situation, the manufacturer has the rights to decide to repair or not. The manufacturer will charge the parts/repair cost and the returning shipping charge.
2. The products out of warranty will charge the parts/repair cost and the returning shipping charge as per the repair status.
3. The manufacturer has the rights to decide to repair or not based on the stock of parts for the products which are phased out of the production.
4. Please e-mail or fax the RMA Service Request Form when have the defective products.

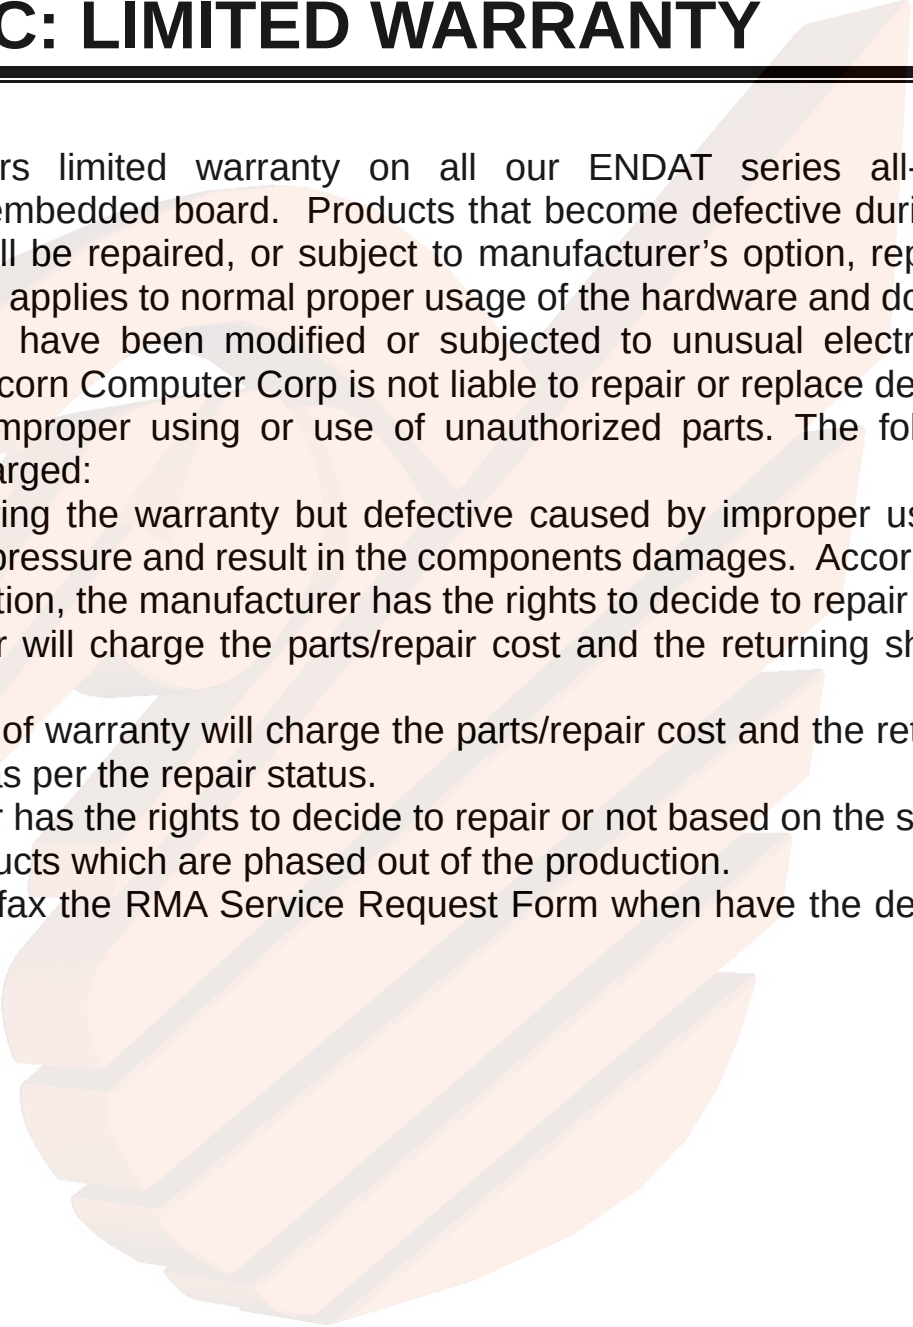

UNICORN

ENDAT-D2512 USERS MANUAL

UNICORN COMPUTER CORP.

RMA SERVICE REQUEST FORM

When requesting RMA service, please fill out this "RMA Service Request Form". This form needs to be shipped with your returns. Service cannot begin until we have this information.

RMA NO.:

Company:	Person to Contact:
Phone No:	Purchase Date :
Fax No. :	Applied Date :
Return Shipping Address:	

Model No.	Serial No.	Problem Description

Please specify the following when returning the RMA boards:

(1) Hardware Configuration (2) OS or Software (3) Testing Program

Authorized Signature